



# nT15AX15/CP-255DN

DVI + VGA + Component To DVI + VGA Scaler



**Operation Manual** 



### **DISCLAIMERS**

The information in this manual has been carefully checked and is believed to be accurate. Cypress Technology assumes no responsibility for any infringements of patents or other rights of third parties which may result from its use.

Cypress Technology assumes no responsibility for any inaccuracies that may be contained in this document. Cypress also makes no commitment to update or to keep current the information contained in this document.

Cypress Technology reserves the right to make improvements to this document and/or product at any time and without notice.

### COPYRIGHT NOTICE

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or any of its part translated into any language or computer file, in any form or by any means—electronic, mechanical, magnetic, optical, chemical, manual, or otherwise—without express written permission and consent from Cypress Technology.

© Copyright 2012 by Cypress Technology.

All Rights Reserved.

Version VR1.0 January 2012

### TRADEMARK ACKNOWLEDGMENTS

All products or service names mentioned in this document may be trademarks of the companies with which they are associated.



### SAFETY PRECAUTIONS

Please read all instructions before attempting to unpack, install or operate this equipment and before connecting the power supply.

Please keep the following in mind as you unpack and install this equipment:

- Always follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Never spill liquid of any kind on or into this product.
- Never push an object of any kind into this product through any openings or empty slots in the unit, as you may damage parts inside the unit.
- Do not attach the power supply cabling to building surfaces.
- Use only the supplied power supply unit (PSU). Do not use the PSU if it is damaged.
- Do not allow anything to rest on the power cabling or allow any weight to be placed upon it or any person walk on it.
- To protect the unit from overheating, do not block any vents or openings in the unit housing that provide ventilation and allow for sufficient space for air to circulate around the unit.

### **REVISION HISTORY**

VERSION NO.	DATE DD/MM/YY	SUMMARY OF CHANGE
VR0	17/10/13	Preliminary Release
VR1	16/07/14	Output format



# **CONTENTS**

1.	Introduction	1
2.	Features	1
3.	Package Contents	1
4.	Operation Controls and Functions	2
	4.1 Front Panel	2
	4.2 Rear Panel	3
	4.3. Remote Control and functions	4
5.	Installation	5
6.	OSD Operation	8
	6.1 Video (or PC)	8
	6.2 Color	10
	6.3 Output	10
	6.4 OSD Adjust	10
	6.5 Information	10
7.	Specifications	.11



### 1. INTRODUCTION

This DVI Scaler is designed to convert PC, SD, HD and DVI to digital DVI at a variety of HDTV and PC resolutions. It handles input and output signal at 165MHZ ultra high bandwidth. It also has many great features to enhance video performance and is ideal for use in professional large screen presentation.

### 2. FEATURES

- High bandwidth and professional PC/Component/DVI to DVI Scaler that accepts PC RGB (up to WUXGA), HD Component (480i up to 1080p) and DVI (up to WUXGA) and scale them up to DVI-I output (1080p/WUXGA).
- The input analog PC or HDTV signal in the format of either RGBHV, YPbPr, (YCbCr) or digital DVI.
- The output digital DVI plus analog PC/HD with selectable output resolution from 480i to 1080p and VGA to WUXGA.
- The input resolution is automatically detected while the output resolution and refresh rate can be selected through OSD menu or front panel push buttons.
- Native output resolution ensures most optimal display resolution on your screen. When "Native" is selected as the output resolution, the device will automatically detect the native resolution of the display and send out the most optimal pixel timing to match TV's final display resolution.
- Output picture adjustment on brightness, contrast, color, RGB level, and H-V position.
- The DVI input is HDCP compliant which means if input is HDCP encrypted then DVI output is also HDCP encrypted. In this case the PC analog output will be turned off.
- Includes advanced features such as Noise Reduction and overscan/underscan adjustment.


### 3. PACKAGE CONTENTS

- PC/HD/DVI to DVI scaler box.
- VGA cable x 1
- YPbPr 3RCA cable x 1
- AC power adaptor 5V/ 2.6A, center positive.



### 4. OPERATION CONTROLS AND FUNCTIONS

#### 4.1 Front Panel



1 Component Input: Connects this input connector to the Component output connector of your source equipment using the enclosed 3RCA to 3RCA cable.

The device accepts both interlaced component input (480i, 576i) and deinterlaced progressive input (480p, 576p...1080p). The input range is from 480i, 570i~1080i to 1080p.

- **2 IR Sensor:** Infrared remote control sensor.
- 3 Input LED Indicators: When one of the LED illuminates its corresponding source is being selected as input.
- 4 Menu/Enter: This button serves two purposes.
  - a. Press the button to bring up OSD main menu as shown in the "OSD Operation". (page 9)
  - b. To act as a "Enter" key to enter sub menu or to adjust setting value of the selected parameter.
- 5 +/- button: The buttons provide 3 functions:
  - **a. Input select ("+"):** Press the "+" button repeatedly to select your desired input source. The input sources are toggled through in the following sequence.


- **b. Auto Tune ("-"):** Press the "-" button to carry out picture auto adjust for analog inputs (component or PC). The device will fine tune the position (centering) and color of the output picture.
- **c. When in the OSD menu mode:** Press the"+", "-" button to move up or down the highlight bar to your desired parameter. Or once a parameter is selected with MENU/Enter button, press the button to



adjust setting value of your selected parameter.

6 Power: Press the button to turn ON or turn OFF (standby) the power of the unit.

#### 4.2 Rear Panel



- 1 Power jack: Connect to the 5V 2.6A DC power adaptor.
- **2 DVI output:** Scaled digital DVI output. Connect this output to the DVI input or HDMI input of your Digital display.

**Note:** When input is a HDCP encrypted DVI signal the DVI output is also HDCP encrypted.

The monitor/display that connected to this output also need to be HDCP compliant in order to get a nice and clean picture. A non-HDCP compliant display can only display non-HDCP signal and picture will become noise when input is a HDCP-encrypted signal.

3 PC/D-Sub out: The connector for scaled analog RGB output. Connect this output port to the analog PC RGB input of your monitor, or connect it to the RGBHV input of your HD display using D-sub to 5 BNC adaptor cable. (not included in the package)

**Note:** When input is a HDCP encrypted DVI signal this analog output will be turned off.

- 4 **DVI input:** Connects this DVI input connector to the DVI output connector of your DVI source equipment. The DVI input should be digital DVI only and should not include analog RGB signal.
  - The use of DVI-I connector is to ensure both DVI-I and DVI-D male connector of the DVI cable can fit into this input connector. The digital DVI input resolution can range from 480i~1080p, or VGA~WUXGA.
- 6 PC input: Connects this PC input connector to the VGA output of your PC. The acceptable PC resolutions range from VGA~WUXGA.




### 4.3. Remote Control and functions

- ON the device. Press again to enter standby mode.
- 2 Input: Press the button repeatedly to toggle through various input sources as follows.

Component → PC → DVI ¬

- **3 HD input:** Press the button to select component input.
- 4 PC input: Press the button to select PC input.
- 5 HDMI/DVI input: Press the button to select DVI (or HDMI) input.
- 6 Output resolution Select buttons:

Press any one of the button to directly select output resolution.




- **7 MENU:** Press the button to bring up OSD main menu page.
- 8 Exit: Press the button to exit from a sub menu or main menu.
- Up/Down/Left/Right:

Press the Up/Down button to move the highlight bar to your desired parameter during the OSD operation.

Press the Left/Right button to increase/decrease the setting value of a selected parameter.


- OK (Enter): Press the button to confirm your selection.
- 11 Reset: Press the button to reset the unit's firmware setting to the factory default value.
- **12 Auto Adjust:** Press the button to optimize the position of the picture (picture centering) on the screen.

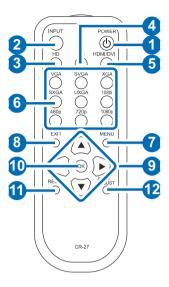



# 5. INSTALLATION

# **Input Connection**

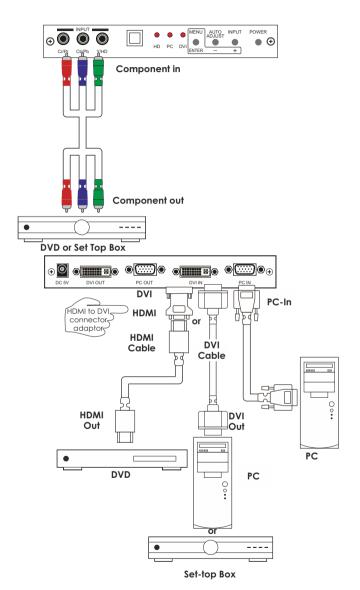




The device accepts component, PC and DVI inputs. The formats supported by these inputs are as follows:

- When connecting to a PC source use a 15-pin D-sub cable to connect the output of a PC to the D-Sub input connector of the device.
- When connecting to a component source (either SD or HD resolution) use a 3RCA to 3RCA cable to connect the YPbPr or YCbCr output of a DVD or Set Top Box to the Y-Cb/Pb-Cr/Pr input connecter of the device.
- When connecting to a DVI source, use a DVI-I or DVI-D cable to connect the DVI output of a PC or DVD to the DVI input connector of the device.
- When connecting to a HDMI source, use a HDMI cable to connect
  to the HDMI output of a HDMI source, such as DVD or STB, on the
  one end. And use a HDMI to DVI connector adaptor to connect
  to the other end of the HDMI cable. The DVI connector of the
  adaptor is then connect to the DVI input of the device.

The device can automatically detect the input resolution of all three inputs. To switch from one input source to another just press the input button on the front panel ("+") or on the remote control.



### **Output Connection**

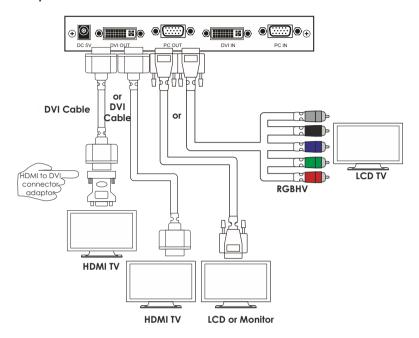


The device can output a variety of PC, SD and HD resolutions in both digital and analog format simultaneously. The digital output is available from the DVI output connector while the analog output is available from the PC D-sub output connector.



### 6. OSD OPERATION


After power on the unit, press the "menu" button will bring up the main menu as follows:

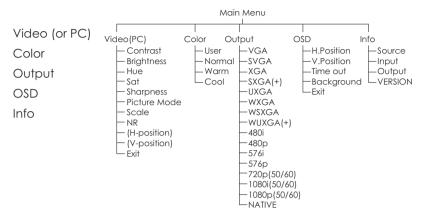

Use +, - button to move highlight bar to your desired parameter, then press MENU/ENTER to enter into sub-menu of your selected parameter.

# 6.1 Video (or PC)

When Video is selected a sub menu as below comes up.

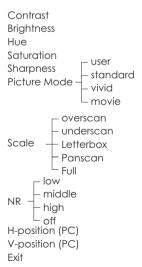



Note (PC): Available only when PC is selected as input.

To adjust picture quality, Use "+,-" to move the highlight bar to your desired adjust item, press the Menu/Enter to confirm your selection.

At this point, the selected parameter will turn red, you can then use +,to increase or decrease the value of the parameter.

When adjustment is complete, press "Menu" to leave the parameter. Move the highlight bar to "Exit", then press Menu/Enter to exit.

**Note:** The "H-position" and "V-position" are only available when component or PC input is selected. Neither are available when the DVI input is selected.

Picture mode: There are 4 picture modes for customer to choose from.

**User:** Select to adjust to your favorite setting and store it.

**Standard:** Standard factory default setting for optimal display in a normal environment.

**Vivid:** High saturation picture for optimal display in a bright room.

**Movie:** Picture for comfortable low brightness display in a dark room.

**Scale:** select overscan when input source is SD or HD video to ensure no black band around screen border. Select underscan when input source is PC signal to ensure full picture content fall within screen border.

**Noise Reduction:** This function only works when input is analog RGB or component. It will not work for DVI input. There are four steps of Noise Reduction-Off, Low, Middle High. The Noise Reduction will remove the noise that results from analog to digital conversion and digital scaling processing.

**H & V position:** To adjust for best horizontal and vertical position of the picture in the screen.



### 6.2 Color


**User:** Select to adjust to your favorite color

temperature setting.

**Normal:** Normal color tone setting where white is pure white.

Warm: Warm color tone makes white reddish.

Cool: Cool color tone makes white bluish.



### 6.3 Output

The device can output a wide variety of PC and HD resolutions. Detail please refer to product specifications.

### 6.4 OSD Adjust

**H.Position:** Adjust the horizontal position of the OSD graphic.

V.Position: Adjust the vertical position of the OSD graphic.

**Time out:** Set a predetermined time to turn off OSD menu on the

screen.

**Background:** To select transparent or solid background of OSD

graphic.

### **6.5 Information**

**Source:** Show product model number.

**Input:** Show input resolution i.e. XGA.

**Output:** Show output resolution i.e. 720p.

**VERSION:** Show date of firmware version.



# 7. SPECIFICATIONS

### **HDMI Compliant**

Input format (Up to 165MHz)

Resolution	INPUT		
	Component	D-SUB	DVI/HDMI
480i/576i	V		*
480p/576p	V	V	V
720p@(60/50)	V	V	V
1080i@(60/50)	V		V
1080p@(60/50)	V	V	V
VGA@(60/72/75/85)		V	V
SVGA@(56/60/72/75/85)		V	V
XGA@(60/70/75/85)		V	V
SXGA@(60/75/85)		V	V
UXGA@60		V	V
WXGA@60(1280X800)		V	V
WSXGA@60(1680X1050)		V	V
WUXGA@60(1920X1200)		V	V

<sup>\* 480</sup>i 30x2 / 576i 25x2

# Output format (Up to 165MHz)

Resolution	OUTPUT	
	D-SUB	DVI/HDMI
480i/576i	*	*
480p/576p	V	V
720p@(60/50)	V	V
1080i@(60/50)	V	V
1080p@(60/50)	V	V
VGA@60(640x480)	V	V
SVGA@60(800x600)	V	V
XGA@60(1024x768)	V	V
SXGA@60(1280x1024)	V	V
UXGA@60		V
WXGA@60(1280X800)	V	V
WSXGA@60(1680X1050)		V
WUXGA@60(1920X1200)		V

<sup>\* 1440</sup>x480 / 1440x576



**Input Connectors** YCbCr/YPbPr x 1 via 3 RCA jack

PC RGB x 1 via 15 pin D-sub

DVI x 1

Output Connectors DVI x 1

PC 15 pin D-sub x 1

**Dimension** 180(W)x124(D)x25(H)mm/Jacks Excluded

180(W)x132(D)x25(H)mm/Including Jacks

Weigh 452g

**Power Supply** 5V 2.6A (US/EU standards, CE/FCC/UL

certified)

Chassis Material Aluminum

**Silkscreen Color** Gray

**ESD Protection** Human body model:

±8kV (air-gap discharge)

±4kV (contact discharge)

Operating Temperature  $0^{\circ}\text{C} \sim 40^{\circ}\text{C}$ 

Storage Temperature  $-20^{\circ}\text{C} \sim 60^{\circ}\text{C} / -4^{\circ}\text{F} \sim 140^{\circ}\text{F}$ 

**Relative Humidity** 20 ~ 90% RH (non-condensing)

Power Consumption 6W

